

Keyboard Shortcuts for AudioReQuest

NOTE: These shortcuts work on the TV interface with a USB keyboard plugged in, the Interactive Webservice Remote and the JavaRemote.

Album	Shift + F4	Next Song	Down Arrow
Artist	Shift + F3	Next Genre	*
All	Shift + F2	Now Playing	Shift + F5
Cancel	Esc	Play	Enter
CD	Shift + F1	Playlists	@
CD Tray Open/Close	,	Pause	F6
Copy	Insert	Power	F4
Delete	Delete	Previous Genre	\$
Deselect	Alt + F12	Previous Song	Up Arrow
Edit	Shift + F12	Random	(
Edit Genre	/	Record	F7
EQ	Shift + F8	Repeat	F9
Fwd	Right Arrow	Rewind	Left Arrow
Genres	#	Search	Shift + F11
Help	F1	Select	F12
Info	Shift + F9	Shuffle	F8
Intro	F10	Sort	Shift + F10
Jukebox	F11	Stop	F5
Jump Down	Page Down	Themes	Shift + F7
Jump Up	Page Up	Visuals	Shift + F6
Menu	F3	Volume Down	End
Mode	F2	Volume Up	Home