

 


1. Getting Started

Home Page



Toggle between additional commands.



Switch to **Now Playing** Pick a different audio source. Turns off speakers (in the current room)



Choose a different room in the house to control and play music.




Create specialized party events that play music in multiple rooms from the same source. Examples include whole house party for all rooms, or dinner party that combines the kitchen and dining room.



Displays a countdown for 10 seconds that disables the touch screen during cleaning.

2. Choosing a Source

Source Selection

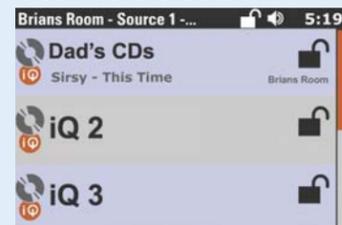


Displays a list of all the available audio component sources, including the iQ CD collection source.

Hard Buttons



3. Finding Your Music

Browse by Category

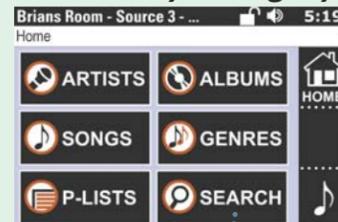

Select an iQ CD source to choose from Artists, Albums, Songs, Genres, and Playlists. A search option is also available.

- Return to the Home Page
- Switch to Now Playing

Browse




Browse list sorts according to the category. Press the up and down hard buttons to page up and down accordingly.

Press a selection in the list to display the content of that item and show more information (such as the album if browsing by artist) or start playing if displaying songs.

To display play options, press the icon to Play Now or add to the end of the current Now Playing list.

Search

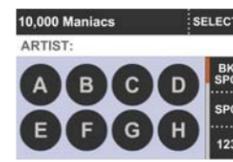

Selecting Search from the Browse by Category allows you to search by Artists, Albums, Songs, or Genres. Use the onscreen keyboard to type the first letters of the desired music title. Use the up and down hard buttons to toggle between the rest of the alphabet or press the 123 button to display numbers.

Browse By Letter



 
In the browse page, press the abc button. Use the up and down hard buttons to quickly go to the first letter of the music choice in the list. To jump to that letter, touch the letter displayed.

4. Playing Your Music

Now Playing



Display the currently playing music.



Play / Pause Switch to Browse by Category Home



Stop Press Play to restart Now Playing list Previous Track Next Track



Shuffle Plays randomly from Now Playing list Repeat Loops Now Playing list Lock Source



Skip to next or previous user playlist Skip to next or previous genre



Displays entire Now Playing list Empties Now Playing list and stops music.

Top Status Bar Icon Legend



Party Mode

P This room is in Party Mode. To leave party mode, go to Home page, then Multi-Room Party, then Leave Party.

Source Sharing

S This room is sharing a source with another room

Source Lock

Prevents source from being controlled by another room

Current source is unlocked.

Current source is locked in another room.

Source is locked and controlled by this "Master" room.

Volume

Music is un-muted

Music is muted



1. Getting Started

 
Home Page



Toggle between additional commands.



Switch to Now Playing Pick a different audio source. Turns off speakers (in the current room)



Choose a different room in the house to control and play music. Create specialized party events that play music in multiple rooms from the same source. Examples include whole house party for all rooms, or dinner party that combines the kitchen and dining room.



Displays a countdown for 10 seconds that disables the touch screen during cleaning.


2. Choosing a Source

Source Selection



Displays a list of all the available audio component sources, including the iQ CD collection source.

Main Interface Buttons

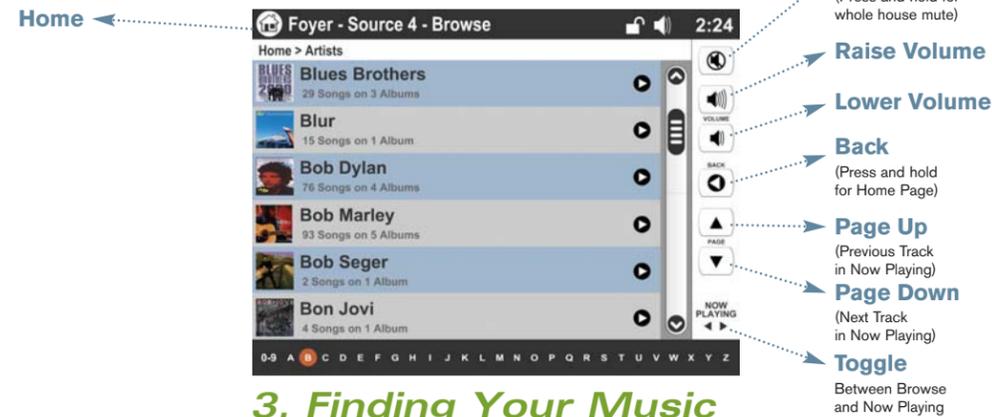

3. Finding Your Music

Browse by Category



Select an iQ CD source to choose from Artists, Albums, Songs, Genres, and Playlists. A search option is also available.

Browse



Browse list sorts according to the category. Press the up and down buttons on the side or use the scrollbar to page up and down accordingly.

Press a selection in the list to display the content of that item and show more information (such as the album if browsing by artist) or start playing if displaying songs.

To display play options, press the icon to Play Now or add to the end of the current Now Playing list.

Search



Selecting Search from the Browse by Category allows you to search by Artists, Albums, Songs, or Genres. Use the onscreen keyboard to type the first letters or numbers of the desired music title.

Browse By Letter



Use the alphabet menu at the bottom of the sorted browse list to quickly jump to items beginning with that letter. Select 0-9 for items starting with numbers.

4. Playing Your Music

Now Playing



Display the currently playing music.



Play Pause Stop Press Play to restart Now Playing list Previous Track Next Track Switch to Browse by Category



Shuffle Plays randomly from Now Playing list Repeat Loops Now Playing list Randomize Plays randomly from entire collection Lock Source



Skip to next or previous user playlist Skip to next or previous genre



Displays entire Now Playing list Empties Now Playing list and stops music.



Top Status Bar Icon Legend



Party Mode
 This room is in Party Mode. To leave party mode, go to Home page, then Multi-Room Party, then Leave Party.

Source Sharing
 This room is sharing a source with another room

Source Lock
 Prevents source from being controlled by another room

Volume
 Music is un-muted
 Music is muted